



EURO HOMEWARE TOWEL WARMER

Operation

Your EURO HOMEWARE Towel Warmer uses only minimal electrical power - about the same as an average light bulb. It will take approximately 20-30 minutes to reach maximum operating temperature. For best results, only two - three generous sized towels should be heated at one time. The heat of this unit may increase significantly if overloaded with an excessive number of towels. NOTE: The temperature of your towel warmer will vary with the ambient temperature of your room. As a result of this the warmer will feel hotter to touch during warmer periods. A towel warmer is designed to warm and assist the drying of towels and will normally operate at a temperature that is too hot for the warmer to be grasped for an extended time

Locating Instructions

Detailed installation instructions are provided on the reverse side. The EURO HOMEWARE Towel Warmer should be fixed through the wall cladding directly to studs or other suitable anchor material. It should be at least 55mm below the ceiling or any overhanging surface and at least 300mm above the floor or 40mm above counter top and should not in any circumstances be located in the direct path of a water source (tap or shower etc)

Electrical Installation

Please ensure your towel warmer is installed by a registered electrician and ensure the electrical supply, plug & switch location, and product location will comply with your local regulations.

New Zealand electrical wiring requirements stipulate that this appliance must be wired by a registered electrician in accordance with current electrical wiring regulations. This appliance must be fitted with an air gap phase isolation switch which isolates the phase & neutral in accordance with local wiring regulations. **This product must be used in conjunction with a hard wired switch.** For complete temperature control a wall mounted dimmer switch (with "off" position) is recommended

Care and Cleaning

All components are made from high quality materials. The finish of your Towel Warmer is hard wearing and easily maintained. Clean with a soft cloth and non-abrasive cleaning agent.

Warranty

This product is warranted against defects due to faulty workmanship or materials for 3 years from date of purchase. In the event of a defect in the product, turn it off at the wall, and contact the retailer from which it was purchased and provide details from your sales receipt and the products serial number from the label on the towel warmer. The retailer will contact Heirloom who will assess the matter and if accepted as a valid warranty claim the product will be repaired or replaced at Heirloom's option – free of charge. Costs of disconnection, reconnection, and freight are the responsibility of the owner, as is any damage arising in transit to and from servicing by Heirloom. This warranty does not cover:

- a. Any damage to the product caused by misuse, neglect, accident, or in violation of the manufacturer's instructions, or
- b. Any damage, loss or injury arising as a consequence of the use of the product.

Australia: Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

Heirloom International Limited, P O Box 204 235, Auckland 2161, New Zealand.
Ph +64 9 274 4443 info@heirloom.co.nz

Contact Us

We welcome your feedback on our products. You can view our full range of towel warmers on our website and send us your comments about this product using the Contact Us page on our website www.heirloom.co.nz

INSTALLATION OF EURO HOMEWARE TOWEL WARMER

SPECIFICATIONS		Rating at 240 Volts AC		Voltage
		White (W)	Stainless Steel	
Model WE450	Euro Homeware Eco		30 Watts	240 VAC
Model WE575	Euro Homeware Standard	54 Watts	48 Watts	240 VAC
Model WE740	Euro Homeware Deluxe 3	70 Watts	51 Watts	240 VAC
Model WE700	Euro Homeware Deluxe 4	70 Watts	50 Watts	240 VAC

This Package Contains:

1 Towel Warmer and flex (with 2 pin plug – Australia Only)
Plastic Mounting Bracket

Plastic Cover Plugs (2 per Bracket)
Mounting Screws (2 per bracket)

CAUTION


Prior to installation please ensure the product is to your satisfaction. Once installed Heirloom cannot be responsible for defects in the product finish. **This product is not intended for use by young children or infirmed persons without supervision. Young children should be supervised to ensure they do not play with the product.** If the supply cord is damaged it must be replaced by the manufacturer, its service agent, or similarly qualified persons in order to avoid a hazard.

Installation:


Please ensure your towel warmer is installed by a registered electrician and ensure the electrical supply, plug & switch location, and product location will comply with your local regulations. We recommend that the towel warmer be installed on a flat and uniform wall, and into studs or other suitable anchor material. While not recommended, if fixing to hollow cavity walls, Toggle Anchors or similar devices must be used.

Position the towel warmer so that the plug and mains power receptacle are easily accessible, with the cable entry to the towel warmer NEAREST THE FLOOR. Avoid the supply cable coming into contact with the heated parts of the towel warmer.

DO NOT PLUG THE UNIT INTO THE POWER SUPPLY BEFORE INSTALLATION IS COMPLETE.

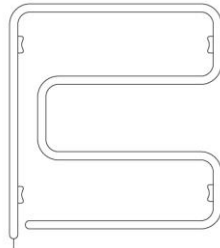

Euro Homeware Deluxe 4

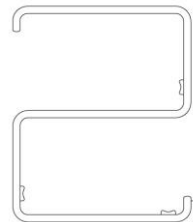

Euro Homeware Eco, Standard, Deluxe 3

Suggested positions for the wall brackets are shown in the drawings above

1. The towel warmer can be mounted facing left or right with the cable entry at the bottom of the unit.
2. Position the wall brackets in the required locations. (the screw inside each leg bracket can be slightly loosened to move the legs into position. The screw can then be retightened)
3. Hold the unit against the wall in the desired position in accordance with these instructions and mark the mounting holes with a pencil. Pre-drill the holes through the wall cladding into the stud.
4. Ensure the screw at the rear of the bracket is securely tightened and then screw the brackets to the wall
5. Insert the plastic cover plugs into the mounting bracket screw holes