


Installation of Anti Tamper Kit

1. Push either section of the tamper evident kit flush button down to reveal a notch in the button that has not been depressed
2. Place a flathead screwdriver into the notch and apply pressure to lever the button out of the button housing
3. Repeat this process with the remaining flush button section. This will reveal white a flathead screwdriver slot in the centre of the flush button housing
4. Remove the screw and the flush button housing separates from the body/legs of the tamper evident kit
5. Fit the tamper evident body to the outlet valve. There is a slot on each side of the outlet valve that will receive the legs of the tamper evident body. **IMPORTANT:** The two arms are different sizes, so make sure the each leg is fitted to the correct slot
6. Adjust the height of the legs so that the cistern lid will sit in the correct position on top of the cistern
7. Place the chrome flush button housing into the cistern lid flush button hole.
8. Put the cistern lid back into place on the cistern and screw the white flathead screw of the flush button housing into the tamper evident body that has already been installed on the outlet valve
9. Drop the flush rods into the flush button housing so they make contact with the outlet valve. Mark the required length of the flush rods, cut to size and fit into the flush buttons making sure full and half flush match
10. Refit the sections of the flush buttons into the slots of the housing.

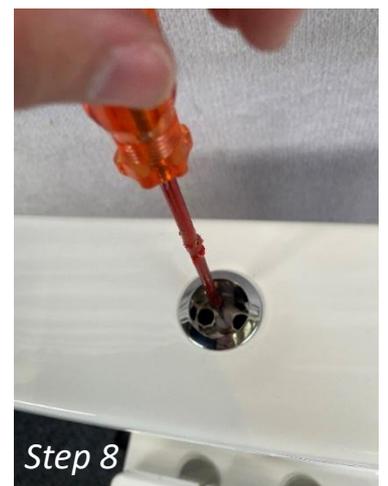

Removal of Anti Tamper Kit

1. Repeat steps 1 – 4 above
2. To remove the tamper evident body simultaneously press the release buttons on either side of the outlet valve and remove the tamper evident kit legs from holding slots

